

## Instruction for Counterweight Installation


1. We will supply the screwed counterweight as below photo .



2. So you have to unscrew the counterweight (turn off screw) at first and put the unscrewed counterweight under the back of the excavator . See below photo
-



3. Weld the screw rod onto the excavator beam. See below photo .

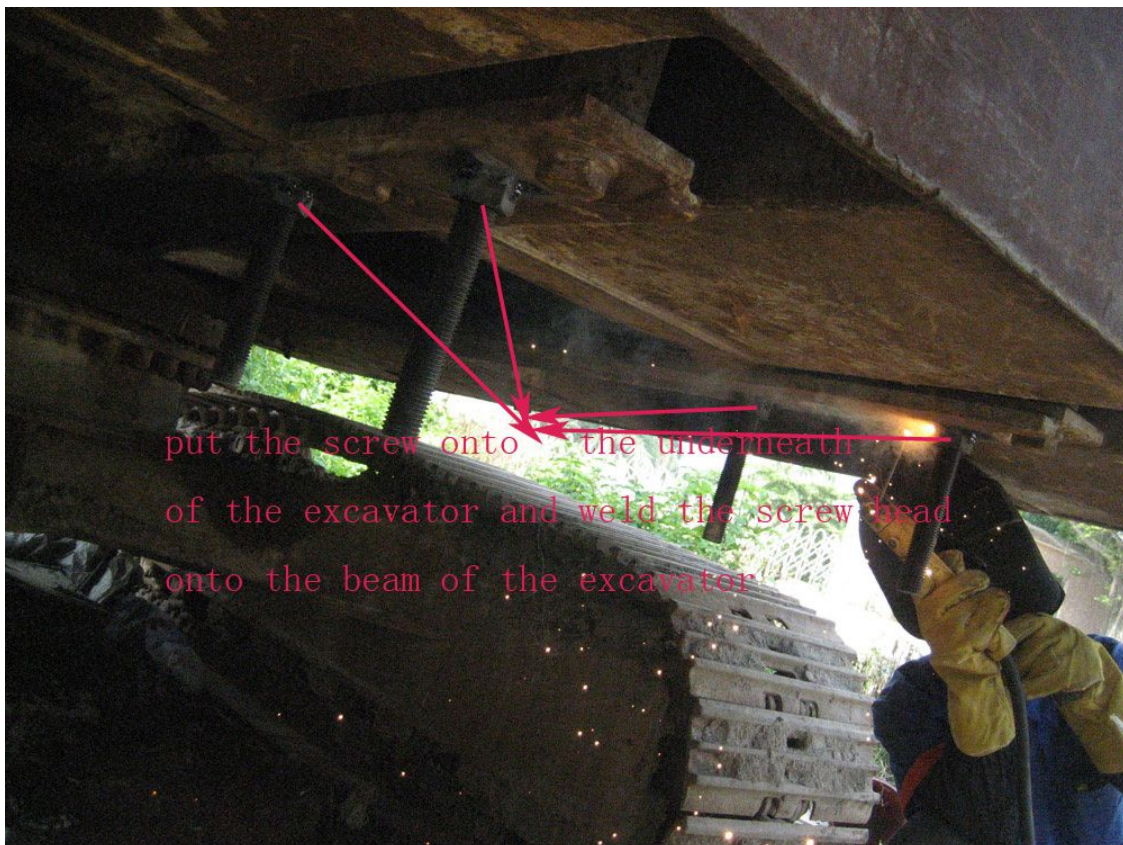

4. Put the counterweight through the screw rod and , then, turn on the nut . See below photos





**Victory Construction Equipments Co.Ltd**

Address: No. 101 ShuangLong Road,Fushan District,Yantai, Shandong, China  
Tel:0086-392-2803020

E-Mail:sales@vequipments.com

---

